





On the Tentiva baseboard lanes RX0 and RX1 are swapped. To compensate lanes 0 and 1 are swapped